8.500

5.500

INSTALLATION INSTRUCTIONS

For Mailbox Model #VP

-Post Installation

1) Dig hole approximately 20" deep and 9" in diameter.
2) Place the 4X4 post 18"-24" in the ground. Fill with concrete (follow manufacturer's instructions for mixing). Level and allow concrete to cure. NOTE: length of post above the ground should be between 48" to 54".
3) Slide the post base section over the 4x4 post.
4) Slide the top post section over the 4x4 post until if fits flush on the post base section.

HARDWARE INCLUDED

(8) #10–24 SCREW

(8) #10–24 HEX NUT


(4) #10 WASHER

(4) #6 x 1–5/8" DECK SCREW

(1) #10 x 1–1/2" PAN HEAD SCREW

(4) #10–24 x 1" HEX HEAD SCREW

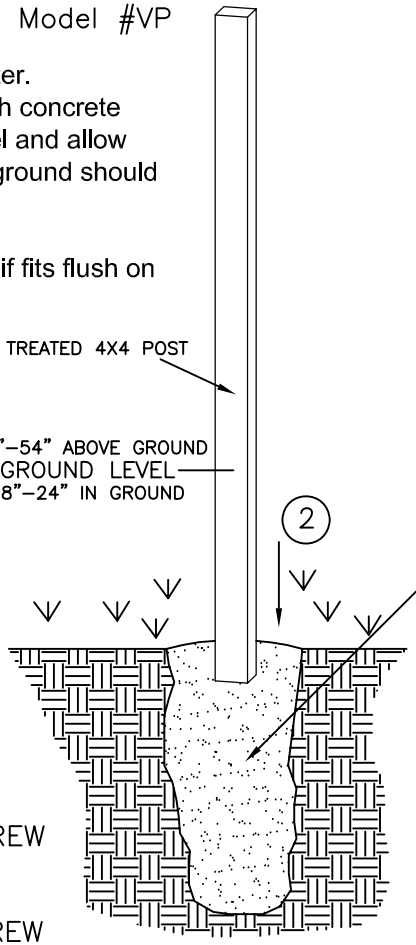

-Warning; check for underground cables or pipes before digging.

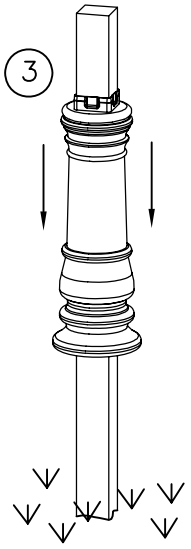

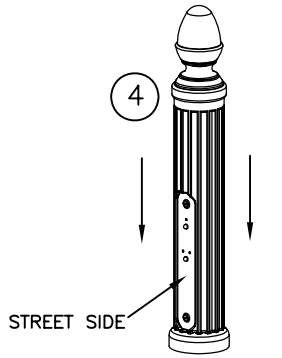

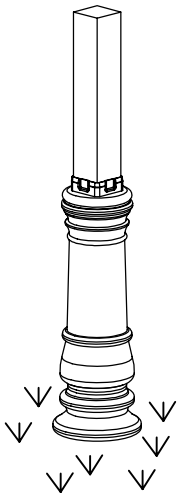

Tools / Supplies Needed:
- 72" treated 4x4 post
- post hole digger
- concrete recommended
- phillips head screwdriver
- flat head screwdriver
- 3/8" open-end wrench
- level

MC0877

ITEM	MATERIAL / PART #	DESCRIPTION / (DRAWING #)	QTY.

BILL OF MATERIALS

ANY PRINT OF THIS PART OR PRODUCT PRIOR TO REVISION DATE SHOWN IN TITLE BLOCK IS OBSOLETE & SHOULD BE DESTROYED

THE INFORMATION CONTAINED, OR REFERRED TO, IN THIS DRAWING IS CONFIDENTIAL AND IS THE PROPERTY OF THE SOLAR GROUP

UNIT OF MEASURE: INCHES

TOLERANCES (EXCEPT AS NOTED)

DECIMAL PLACES	TOLERANCE
0	±.25
1	±.1
2	±.05
3	±.005

ANGULAR ±1°

NO.	DATE	BY
5		
4		
3		
2		
1		

REVISIONS

SCALE: 1:1

DATE: 1/15/07

DRAWN BY: DRY

REV. DATE: 1/23/07

PART#: N/A

DRAWING#: N/A

MATL: HALF SHEET (5.5x8.5)

COLOR(S): N/A

REQD: 1 PER EACH

VP INSTRUCTION SHEET (1 OF 2)

SOLAR GROUP Inc.
A GIBRALTAR COMPANY